
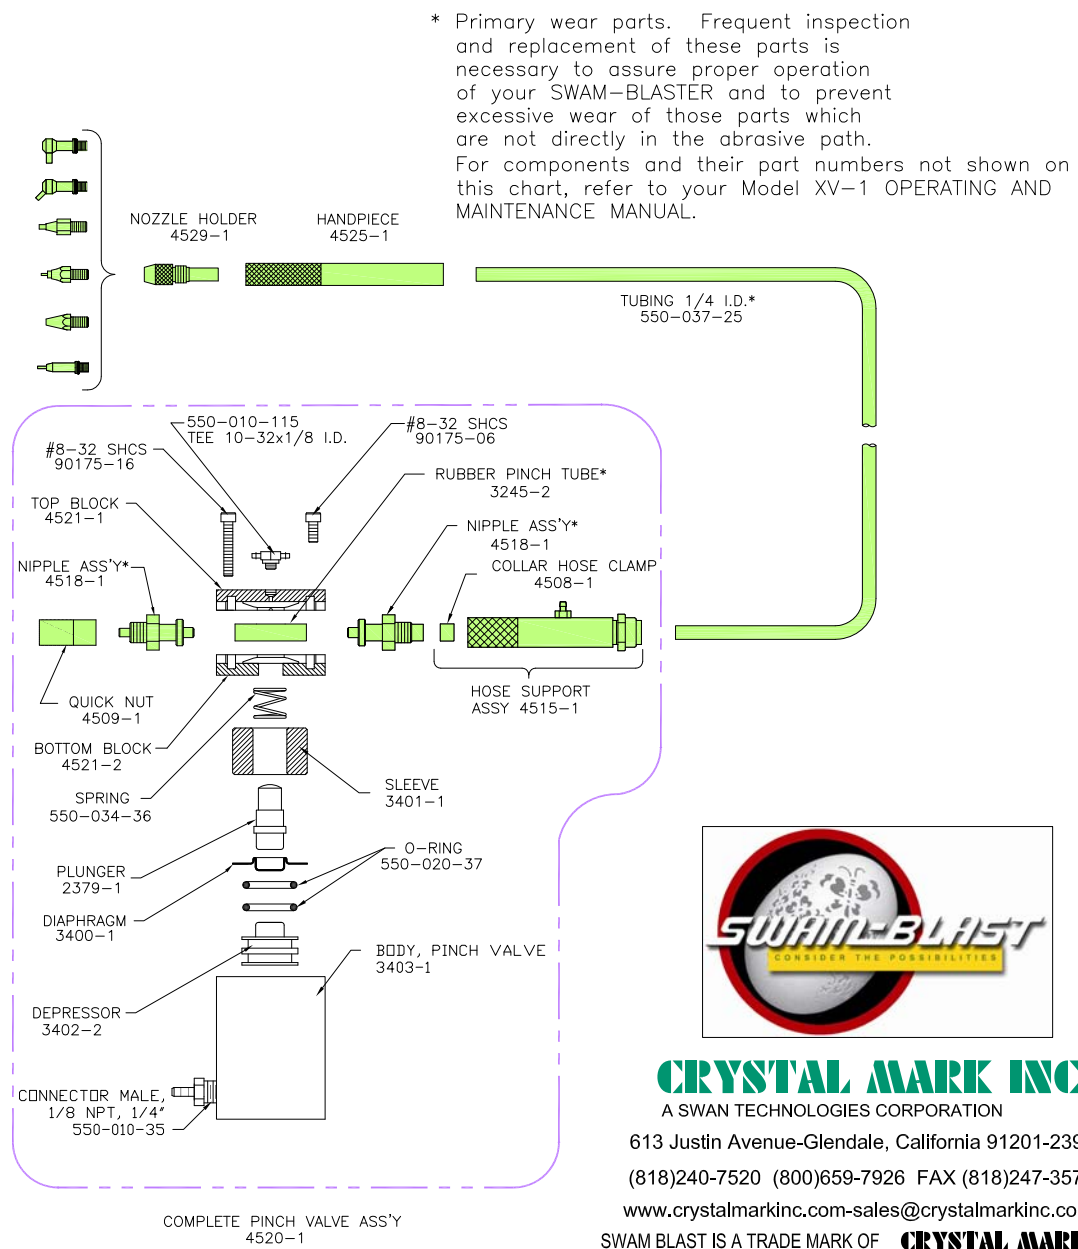


# SWAM-BLASTER®

## Model XV-1 Abrasive Flow Component Chart

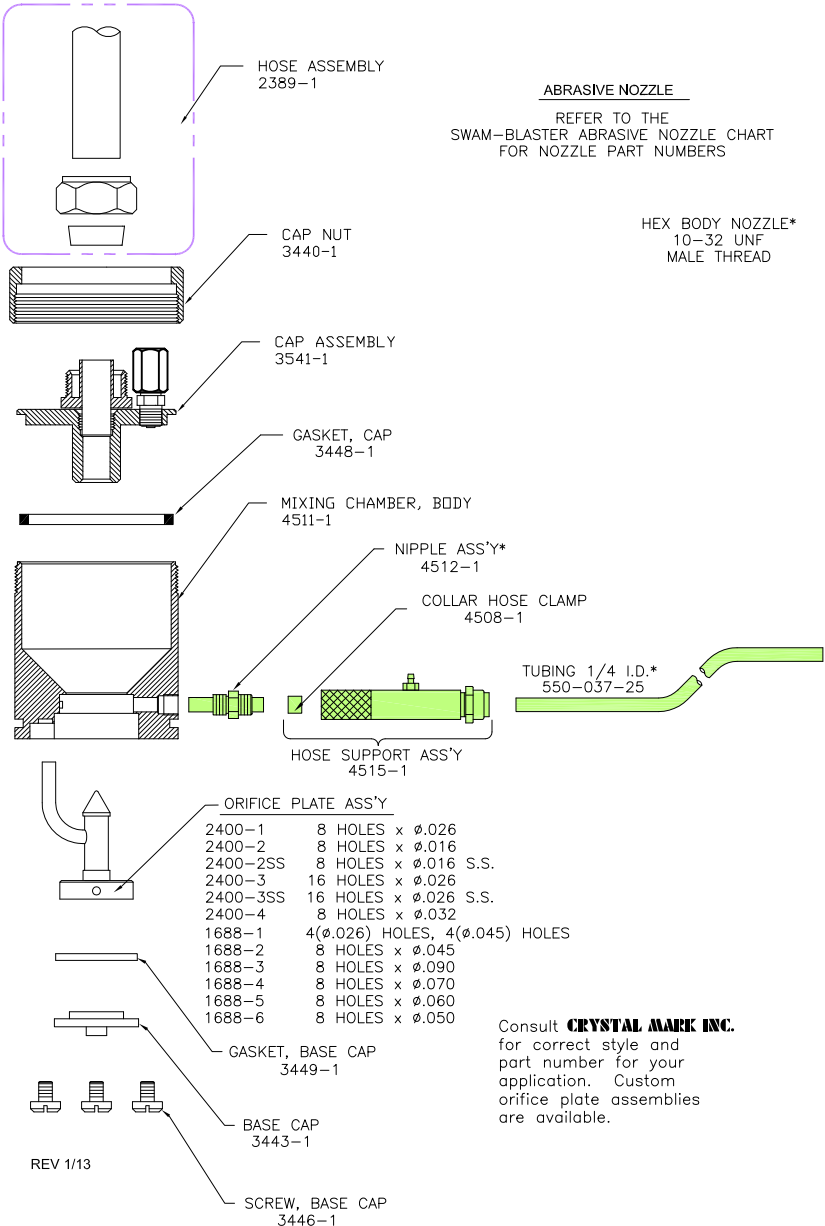

\* Primary wear parts. Frequent inspection and replacement of these parts is necessary to assure proper operation of your SWAM-BLASTER and to prevent excessive wear of those parts which are not directly in the abrasive path. For components and their part numbers not shown on this chart, refer to your Model XV-1 OPERATING AND MAINTENANCE MANUAL.

Consult **CRYSTAL MARK INC.** for correct style and part number for your application. Custom orifice plate assemblies are available.



### CRYSTAL MARK INC.

A SWAN TECHNOLOGIES CORPORATION

613 Justin Avenue-Glendale, California 91201-2396  
 (818)240-7520 (800)659-7926 FAX (818)247-3574  
 www.crystallmarkinc.com-sales@crystallmarkinc.com  
 SWAM BLAST IS A TRADE MARK OF **CRYSTAL MARK INC.**