
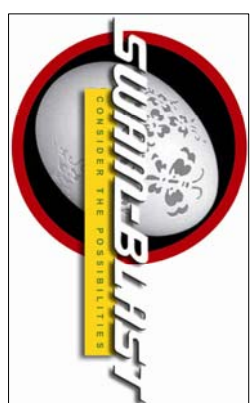


SWAM-BLASTER®

Model MV-2L/EV-2L Abrasive Flow Component Chart

* PRIMARY WEAR PARTS: Frequent inspection and replacement of these parts is necessary to assure proper operation of your SWAM-BLASTER and to prevent excessive wear of those parts which are not directly in the abrasive patch.

For components and their part number not shown on this chart, refer to your model MV-2/MV/2L operating and Maintenance Manual.

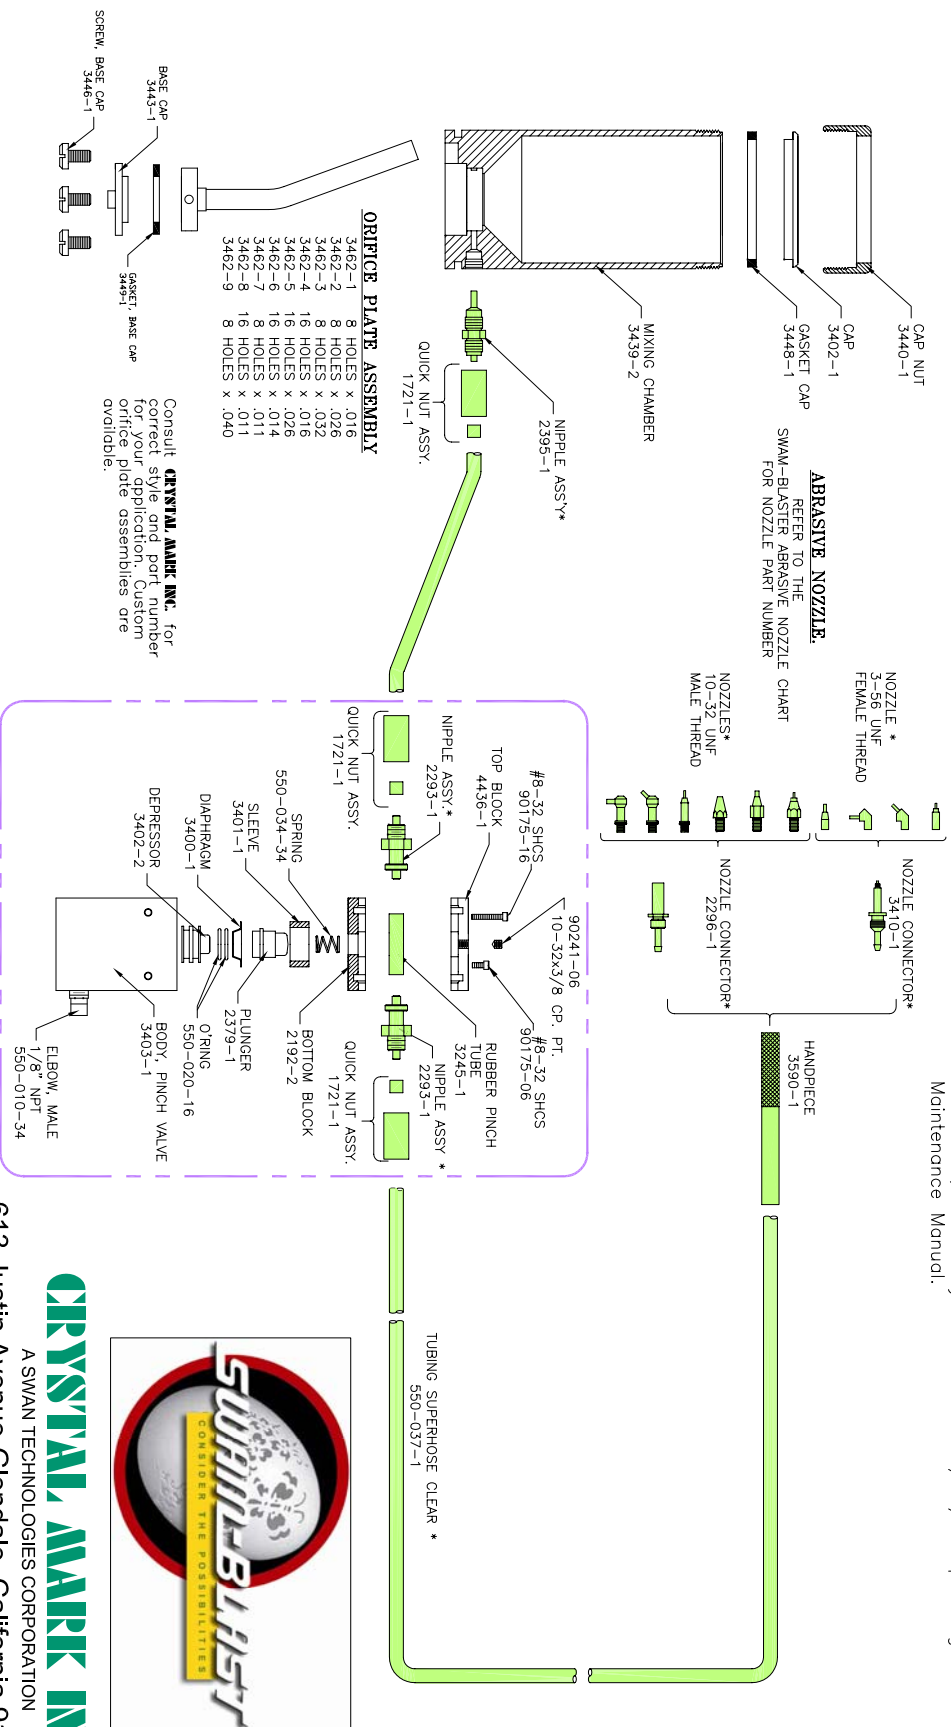

CRYSTAL MARK INC.

A SWAM TECHNOLOGIES CORPORATION

613 Justin Avenue-Glendale, California 91201-2396
 (818)240-7520 (800)659-7926 FAX (818)247-3574
www.crystalmarkinc.com
sales@crystalmarkinc.com
 SWAM BLAST IS A TRADE MARK OF **CRYSTAL MARK INC.**

Consult **CRYSTAL MARK INC.** for correct style and part number for your application. Custom orifice plate assemblies are available.